Universal Control Quiet Curtain Motor Manual




Features


- AC100-240V, widen voltage input for different voltage power area
- Light touch to start the motor by softly drag the curtain fabric, it will open or close the curtain automatically
- When the electricity off, it can be manually operated
- Soft start and soft stop, quiet and smooth running
- It takes the first open and close position as its stops, and keeps the small gaps of the pulleys and pulley and gearboxes to protect the parts clash.
- Various control way for application requirements
- Flexible quiet design: high-precision drive, leading intelligent design, beside, slow open and close make it light and smooth moving
- Various control: According to the application, with option of RF control, hard wire, RS232/485 bus line control etc
- Remember limits: Motor remember the first open and close stop, and keep no hit on the parts for longer life usage, even the power off and on again

Parameters


Model No.	Rated torque	Speed	Housing size	Rated voltage	Rated power	IP level
AM50-1.2/100-EM-P	1.2N.m	12CM/S	295x50x50mm	100~240V AC 50/60Hz	40W	IP20


Loading diagram

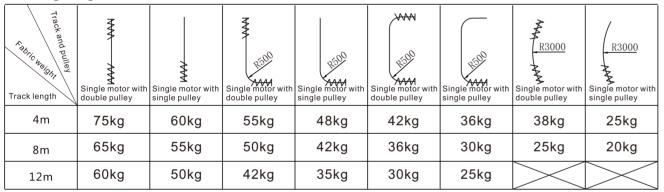


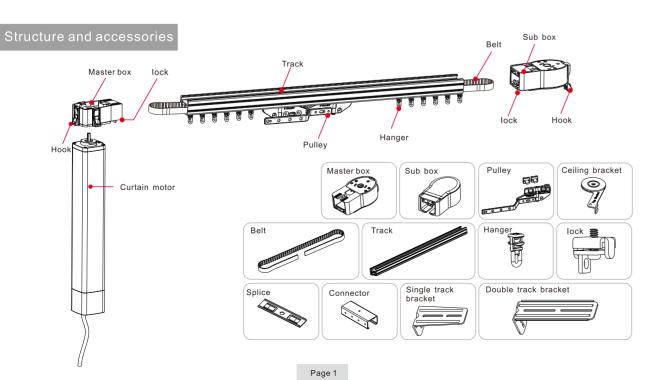



Solution

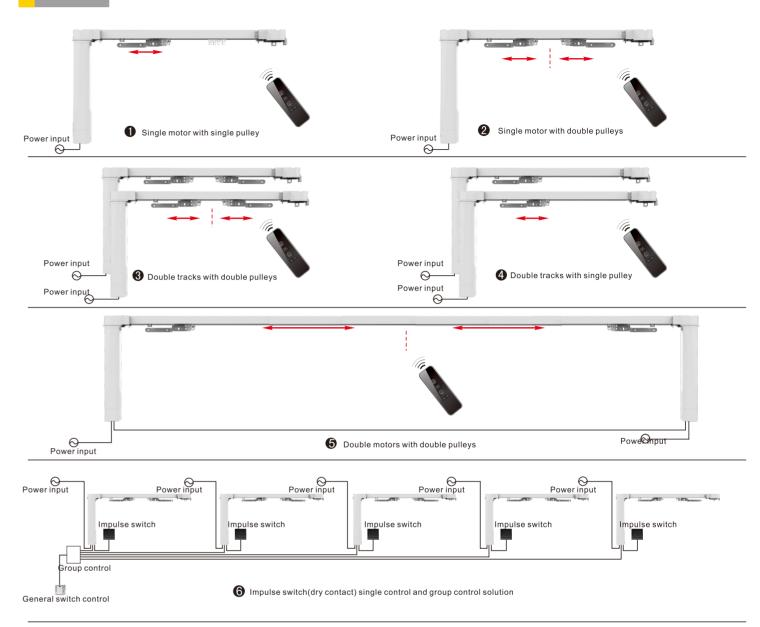

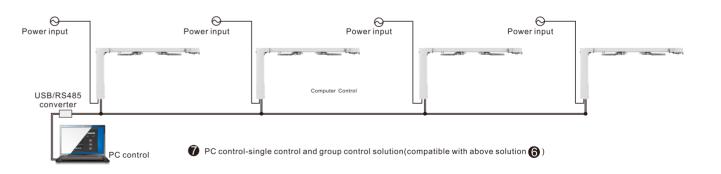

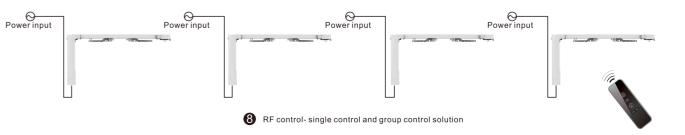

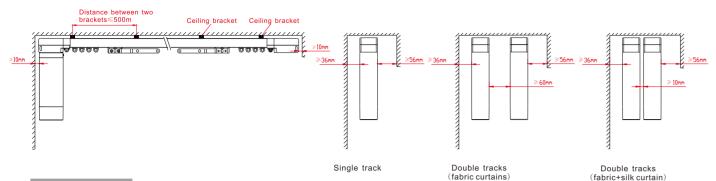

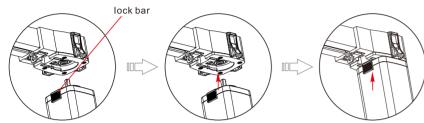

1. Please check the lock bar is in the correct position as shown in the image

2. Insert motor to master box

A Caution

- ☐ Please follow the above diagram for installation
- Make sure the lock bar in the position as shown in
- lacksquare Make sure the ceiling is strong enough to bear the total weight of track, motor and curtain




1.Pull the lock bar out of the limit hole

2. Slide the lock bar to the left

3. Remove the motor

3. Slide the lock bar and make

sure it is in the limit hole

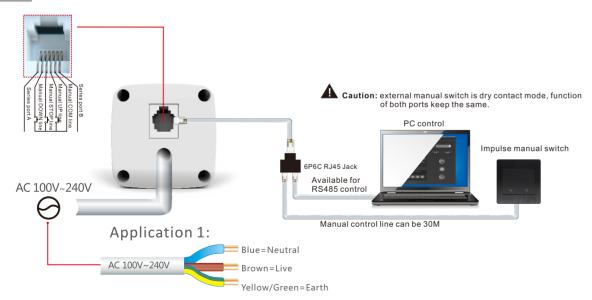

Dry contact、RS485 Control、Radio control

Operation instructions

Please select channel for multi-channel transmitter before operation 0.5s is needed for up/down converting, max single running time is 4 min

1 Programming





slowly, please do the next step within 10s



In the case of the motor

goes in wrong direction



Changed

Press STOP on programmed transmitter and hold for 5s

2 Changing direction

press stop again

3 New transmitter adding

Press the PROG button 1s



Press UP of transmitter



If you are using multiple chamel transmitter please select the channel first





 Deleted Blue light flash 3 times

Deleted

Press STOP on programmed transmitter and hold for 5s

Press DOWN

5 All code deleting

Journey will be deleted and the running direction will be the factory defaulted mode, keeping the touch function








Press the PROG button on motor and hold for 3s

Press the PROG button again

Manual function setting

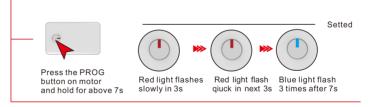

Trouble shooting

Problem	Analysis		Solution
Power on, but motor no reaction	Check the wiring is correct or not.		ase follow the wiring diagram to correct connection.
Motor is working but the curtain don't move	Check the method of the track installation is right or not.		ase check and adjust the wheel gear d belt.
Motor work automatically	Motor paired by other transmitter.	De	ete all remotes, programming again.
Can't pull curtain move by hand	power off suddenly when motor running the hand pull position is wrong, resulting pulley stuck.	1 '	ull the curtains back wards, then pull it again. and pull position back 10 cm.

Page 3 Page 4